



POWER BUTTON

OPERATION

TO A USB-C CHARGER.



knog.

*NOTE THE BLINDER 600 IS PACKAGED IN DEMO-MODE.

TO ENABLE FULL FUNCTION OF THE LIGHT, CONNECT IT

LONG PRESS (2 SECS) - ON/OFF **QUICK PRESS - CHANGE MODE DOUBLE PRESS - TOGGLE BETWEEN STEADY & FLASH MODES** QUICK PRESS WHEN OFF TO CHECK BATTERY STATUS CHARGING

*TO ACHIEVE OPTIMAL OPERATING LIFE FROM YOUR BATTERY, IT IS BEST TO CHARGE WITHIN A TEMPERATURE RANGE OF 15°C - 30°C (59°F - 86°F) IF THE TEMPERATURE DROPS BELOW 0°C OR ABOVE 45°C (BELOW 32°F OR ABOVE 113°F) CHARGING WILL BE SUSPENDED TO PROTECT THE BATTERY.



KNOG.



KNOG.

KNOG.

INSERT USB TYPE-C CHARGING CABLE.



50%

WHEN THE POWER BUTTON LIGHT IS FLASHING RED,

A QUICK PRESS OF THE POWER BUTTON WHEN THE LIGHT

10%

25%

22.2 mm Ø BAR

- 26 mm Ø BAR


- 31.8 mm Ø BAR

- 35 mm Ø BAR

ONCE FULLY CHARGED, THE POWER BUTTON WILL GLOW

BATTERY STATUS

GREEN. AFTER 1 MINUTE THE GREEN LIGHT WILL TURN OFF.

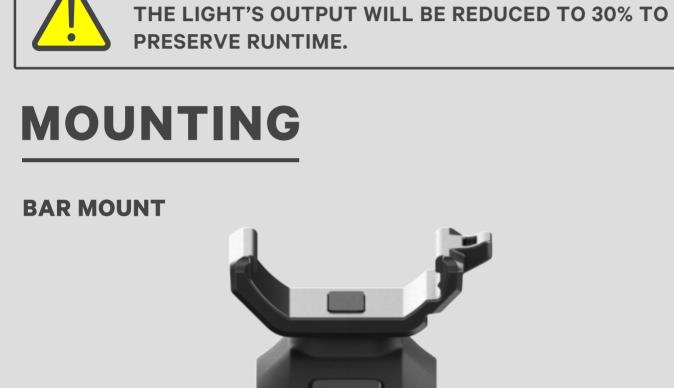


75%

100%

BAR DIAMETER.

SELECT THE CORRESPONDING HOLE TO SUIT YOUR

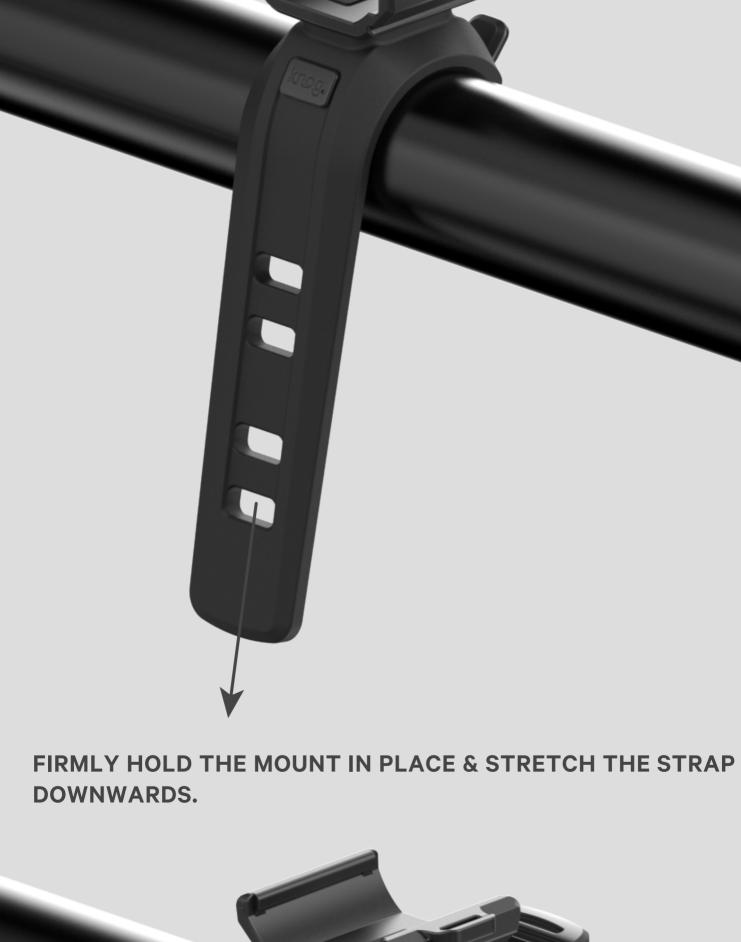

PLACE THE LIGHT IN THE CRADLE.

HOOK.

THEN PULL THE STRAP AROUND THE BAR & SECURE ON THE



PLACE THE LIGHT INSIDE THE MOUNT IN THE UN-LOCKED POSTION. Ellige knog. LOCK THE UNDER-MOUNT. MAKE SURE THE UNDER-MOUNT IS LOCKED BEFORE RIDING. DO NOT RIDE WITH THE UNDER-MOUNT UNLOCKED!

REFER TO YOUR GO-PRO OR COMPUTER MOUNT INSTRUCTIONS

RUNTIME

2hr

4hr

8hr

8hr

16hr

TO COMPLETE BLINDER UNDER-MOUNT INSTALLATION.

MODE LUMENS

> 120hr Eco 90

150

300

150

2 YEAR WARRANTY

KNOG.COM

LOCKED UN-LOCKED

UN-LOCKED.

UNDER MOUNT- (SOLD SEPARATELY)

MODES & RUNTIMES High 600 Medium 300

Low

Pulse

Strobe

DESIGNED BY KNOG MELBOURNE, AUSTRALIA