# QUOKKA

### QUICK START GUIDE

### **GET STARTED**

Quokka comes locked

To unlock hold the button for 5 seconds, light will unlock and turn on at the last used mode.

### **OPERATION**

Turn On / Off: Long press of the button.

Modes: To change between the 4 light modes, use a quick double press of the button. The modes are: Combo (Spot with Wide) / Spot Only / Wide Only / Red only.

Brightness & Flash Setting: To adjust the brightness or flash of a mode, use a single press of the button. The brightness settings are: High / Medium / Low / Medium Flash.

### CHARGING

Fully charge the Quokka before first use.

To charge, take the light out of the silicone strap. Then charge in any USB charge port.

Charge time: 3.3 hr.

### **HEADSTRAP**

Secure the band with adjustable strap toggle.

Once you've found your size you can set and forget.

# BATTERY INDICATOR

When the light is turned on/off the Red LED will flash twice to indicate battery is Low. When charging, the Red LED is on. Once fully charged, the Red charging LED turns off.


## LOCK BUTTON

TO LOCK:

If light is off: After 1 second of holding button, the light will turn on, if button is held for an additional 4 seconds the Spot LED will flash 3 times to indicate the light is locked.

If light is on: After 1 second of holding button, the light will turn off, if button is held for an additional 4 seconds the Spot LED will flash 3 times to indicate the light is locked.



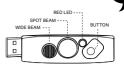





op out left side of the light first (to avoid damaging









### TO UNLOCK:

Hold button for 5 seconds, light will unlock and turn on in the last used mode.

### **CARE & MAINTENANCE**

To clean: wipe with damp, lint-free cloth, don't use harsh chemicals, air dry, don't sun dry.

### WARRANTY

The light is guaranteed for 2 years against manufacturing defects only. The battery is guaranteed for 6 months against manufacturing defents only. See the website for more details. KNGCOMAU